

Ignition Edge Panel

Local Client Fallback

Embed Ignition Edge Panel onto a device, such as a touch panel, to provide an HMI with local access to an edge-of-network device, with a limit of up to 500 tags. Use Ignition Edge Panel to view real-time trending of an edge device on the local level. In the event of a failed network connection, a local client re-targets from a central Ignition server and connects to the local Ignition Edge Panel, providing access to one week of data buffering and maintaining local data visualization.

